

Setting Up a Stowed Jib

Whenever a jib is stowed on the side of the boom, it must be indicated as a **stowed jib** on the display console. The following procedure for setting up a stowed jib has not yet been included in the Setup section of the Greer MicroGuard® 586 Operation/Setup Manual (Part No. W458200B, pages 34-40).

Fig. 1, at the right, **is not displaying correctly for a stowed jib**. The procedure below will eliminate this problem.



Fig. 1

Enter the Setup Mode by pressing the “Setup” key and the Display Select “Up” arrow key simultaneously until the setup screen appears as shown in Fig. 2.

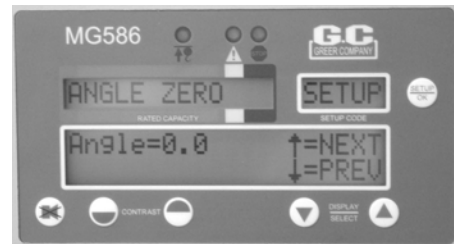


Fig. 2

Now press the “Up” Select key to move the menu up to the JIB SELECTION mode, as shown in Fig. 3. Press the Setup Key once and the screen will blink. Press the “UP” arrow key to scroll to the correct jib configuration. Press the setup key once to select the jib configuration and again to return to the normal operational mode.



Fig. 3

Refer to the Greer operations manual for the procedure for selecting the correct jib mode of operation on the unit.